

This is an attended appliance

Troubleshooting Guide - With the appliance unplugged.

Error Code	
E0 - Incompatible cookware	Check cookware is suitable
E1 - Low Voltage	Check supply voltage
E2 - High Voltage	Check supply voltage
E3 - Top plate sensor short circuit	Allow unit to cool, restart If fault persists, please contact your approved service partner.
E4 - Top plate open sensor fault	Please contact your approved service partner.
E5 - UGBT Sensor overheat or short circuit	Please contact your approved service partner.
E6 - IGBT Sensor Open Circuit	Please contact your approved service partner.

Suitable cookware - diameter between 12-26cm

- All magnetic pans
- Enameled/non enameled cast iron and iron pans
- Steel/mild steel/stainless steel pans

Unsuitable cookware

- Heat-resistant glass / Ceramic
- Copper / Aluminium pans
- Rounded bottom pans