



Troubleshooting Guide - With the appliance unplugged, clean.

Personal Protective Equipment	Please use suitable PPE when troubleshooting this appliance
Unit not working / dead	<p>Check/replace the plug fuse.</p> <p>Check socket and ring main are working and switched on.</p> <p>Check power cord and plug for condition</p>
Power indicator not illuminated	<p>Perform the above checks</p> <p>Indicator may need replacing - contact your approved service agent</p>
The cradle is touching the blade	Carriage may not be positioned correctly
Slicer is not cutting cleanly	<p>Blade may need to be sharpened</p> <p>Product may not be positioned correctly</p> <p>Blade is damaged</p> <p>Drive belt may be slipping/need replacement</p>