## HEA750/751/773/787/788/789/790 Contact Grills



## This is an attended appliance

Troubleshooting Guide - With the appliance unplugged and cool.	
Unit not working / dead	Check/replace the plug fuse.
	Check socket and ring main are working and switched on.
	Check power cord and plug for condition
Temperature cannot be controlled	Thermostat may need to be replaced - contact approved service agent
Indicator light is not illuminated	Power indicator light may need to be replaced
Grill is heating	
Indicator light is illuminated	Check temperature setting dial
Grill is not heating	Element may need replacing - contact approved service agent
	Thermostat may need to be replaced - contact approved service agent