

# HEF572

## Crepe Maker



This is an attended appliance

### Troubleshooting Guide - With the appliance unplugged and cool.

Unit not working / dead	Check/replace the plug fuse.
	Check socket and ring main are working and switched on.
	Check power cord and plug for condition
Temperature cannot be controlled	Thermostat may need to be replaced - contact approved service agent
Indicator light is not illuminated	Power indicator light may need to be replaced
plate is heating	Contact approved service agent
Indicator light is illuminated	Check temperature setting dial
plate is not heating	Element may need replacing - contact approved service agent
	Thermostat may need to be replaced - contact approved service agent