

HEG491 / HEG492

Warming Lamps



Troubleshooting Guide - With the appliance unplugged and cool.

Unit not working / dead	Check/replace the plug fuse.
	Check socket and ring main are working and switched on.
	Check power cord and plug for condition
	Check lamp switches are set to the ON position
Infrared lamp not working	Check lamp switches are set to the correct position
	Check bulbs and installed correctly
	Bulb(s) may need to be replaced (not covered under warranty)
	Switch gear may need to be replaced