



Chefmaster Warming Lamp Instruction Manual

Model

HEG491 – Warming Lamp Single

HEG492 – Warming Lamp Double

Thank you for purchasing your Chefmaster Warming Lamp. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Never touch the lamp shade when the product is on or recently after use.
- Do not fit or remove bulb when the unit is on
- Do not use this product outside
- Do not carry when the lamp is hot
- Always switch off and unplug the unit before cleaning
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents

- 1 x Chefmaster Warming Lamp
- HEG491: Bulb X 1
- HEG492: Bulb X 2

Assembly Instructions

- Remove all packaging including all protective plastic from your Chefmaster Warming Lamp
- Position the base on a flat surface
- Plug your Chefmaster Warming Lamp into the mains
- The Warming Lamp will now be ready to turn on

Operation

- Place food into a heat proof tray, a stainless steel or ceramic GN pan
- Plug the Warming Lamp into the mains and switch on
- The bulbs will now be on and heating up

Cleaning & Maintenance

- Before cleaning, disconnect the warming lamp from the electricity supply.
- Use a soft damp cloth to clean the frame of the Warming Lamp. Only clean the lamp shade when it has cooled down.
- DO NOT submerge the Warming Lamp in water or use water sprays to clean it
- Always clean your Chefmaster Warming Lamp daily

Troubleshooting

Fault	Possible Cause	Solution
The unit is switched on, the bulb is not heating	The unit is not plugged in	Check the unit is plugged in and switched on
	The plug or lead are damaged	Contact your Chefmaster distributor
	The fuse has blown	Replace the fuse
	The bulb not inserted properly	Remove bulb and re-insert
	The bulb has failed	Replace the bulb

Transportation and Storage

Please handle your Warming Lamp with care to prevent any damage to the unit and internal parts. The Warming Lamp should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

HEG491

Voltage:220v 50/60Hz

Power 250 watt

Weight 4.25kg

Dimensions 300 x 160 x 700mm

HEG492

Voltage:220v 50/60Hz

Power 2 x 250 watt

Weight 4.8kg

Dimensions 300 x 160 x 700mm

- Chefmaster Warming Lamp is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have under gone a stringent testing process to ensure that comply with all European standards and specifications.
All Chefmaster products carry the CE approval symbol.