

## Troubleshooting Guide - With the appliance unplugged and cool.

Unit not working / dead	Check/replace the plug fuse.
	Check socket and ring main are working and switched on.
	Check power cord and plug for condition
	Check temperature setting are correct.
Not heating when both heating and timer indicators are on	Temperature controller may need to be replaced - contact approved service agent
	At least one of heating wires may have burnt out
Temperature cannot be controlled	Thermostat may need to be replaced - contact approved service agent
Indicator light is not illuminated oven is heating	Power indicator light may need to be replaced
Indicator light is illuminated oven is not heating	Check temperature setting dial
	Element may need replacing - contact approved service agent
	Thermostat may need to be replaced - contact approved service agent