

## Chefmaster 1000W/1800w Digital Microwave

### Troubleshooting Guide - With the appliance unplugged and cool.

Unit not working / dead	Check/replace the plug fuse.
	Check socket and ring main are working and switched on.
	Check the cord and plug for condition
The power is on but the unit does not function correctly	Unplug the appliance, plug in again after 60 seconds
	Door is not closed - check door is closing correctly
	Touchpad is locked - unlock the touchpad
	Touchpad failure - Contact your approved service agent/distributor
Sparking/Arcing	Use only non metallic microwave safe utensils.
	Oven is being used empty.
TV reception interference	This can be normal during use