

# HEB641

## Rice Warmer



### Do's and don'ts

Do	Avoid cooking small volumes of rice
	Clean the internal body with a damp cloth only.
	Ensure the internal body is free from debris
Don't	
	Expose the internal body to excessive liquid.
	Fill above maximum line

### Troubleshooting Guide - With the appliance unplugged and cool.

Unit not working / dead	Check/replace the plug fuse.
	Check socket and ring main are working and switched on
Cooked rice is too thick	Ensure no damage to non stick cooking pot
	Check water to rice ratio
	Do not open the lid during the cooking process
Cooked rice is hard, smells or appears discoloured.	Has the rice been held for to long?
	Check utensils or spoon has not been left in cooking pot.
	Ensure rice is well rinsed prior to cooking.